








 
 

























MDT Push-button Smart 55 BE-TAS5504.01 & BE-TAS55T4.01 icon list:

|  |   |   |  |
|--|---|---|--|
| Symbol 3: comfort automatic<br>     | Symbol 4: present<br>            | Symbol 5: absent<br>               | Symbol 6: night<br>             |
| Symbol 7: frost protection<br>       | Symbol 8: heat protection<br>    | Symbol 9: Temperature<br>          | Symbol 10: Shutter <10%<br>     |
| Symbol 11: Shutter 50%<br>           | Symbol 12: Shutter >90%<br>      | Symbol 13: open slats vertical<br> | Symbol 14: slats horizontal<br> |
| Symbol 15: close slats vertical<br> | Symbol 16: light off<br>         | Symbol 17: light on<br>            | Symbol 18: lamp off<br>         |
| Symbol 19: lamp on<br>             | Symbol 20: plug socket off<br> | Symbol 21: plug socket on<br>    | Symbol 22: open / unlock<br>  |
| Symbol 23: closed / lock<br>      | Symbol 24: scene<br>           | Symbol 25: scene TV<br>          | Symbol 26: scene Beamer<br>   |
| Symbol 27: scene Relax<br>         | Symbol 28: scene Party<br>     | Symbol 29: day<br>               | Symbol 30: on/off<br>         |
| Symbol 31: music<br>               | Symbol 32: play<br>            | Symbol 33: pause<br>             | Symbol 34: stop<br>           |
|  | Symbol 35: heating<br>         | Symbol 36: cooling<br>           |  |